



FUEL TANK CAP

INSPECTION

1. **INSPECT FUEL TANK CAP ASSEMBLY**
 - (a) Visually check that the cap and gasket are not deformed or damaged.
If the result is not as specified, replace the cap assembly or gasket.